



Parts List for DCD791D2 Type 1

Item Number	Part Number	Description	Qty Required
1	N438742	TRANSMISSION ASSY.	1
2	N415399	HOUSING SET	1
3	N442096	MOTOR & SWITCH ASSY.	1
5	N399342	FWD/REV BUTTON	1
6	N442696	KEYLESS CHUCK	1
8	682211-00	SCREW PLASTITE	9
9	N268241	BELT HOOK KIT	1
10	N268199	BIT CLIP HOLDER	1
11	N042665	MACHINE SCREW	2
13	N377990	SCREW	4
14	N014681	DETENT SPRING	2
15	N393603	SPEED SELECTOR	1
16	N392855	DETENT SPRING	1
23	N439415	ID LABEL	1
24	N439417	SWITCH LABEL	1
25	N424639	RATING LABEL	1
30	N397466	SHIFTER BUTTON	1
861	N385145	KITBOX	1
866	DCB203	BATTERY PACK	2

COPYRIGHT© 2005. All Rights Reserved.

Parts list, pricing, and availability subject to change. Please visit www.dewaltservicenet.com for current parts information.