


Congratulations!

Thank you for choosing a
Shark® Steam Mop!

- **99.9% Sanitization*** with just water
- **Lightweight Powerful Cleaning Performance**
- **Disposable SaniFiber™ Pads** are great for quick clean ups and gummy messes
- **Washable MicroFiber Pads** for long lasting cleaning performance


* Under controlled test conditions, results may vary.

STEAM MOP ASSEMBLY

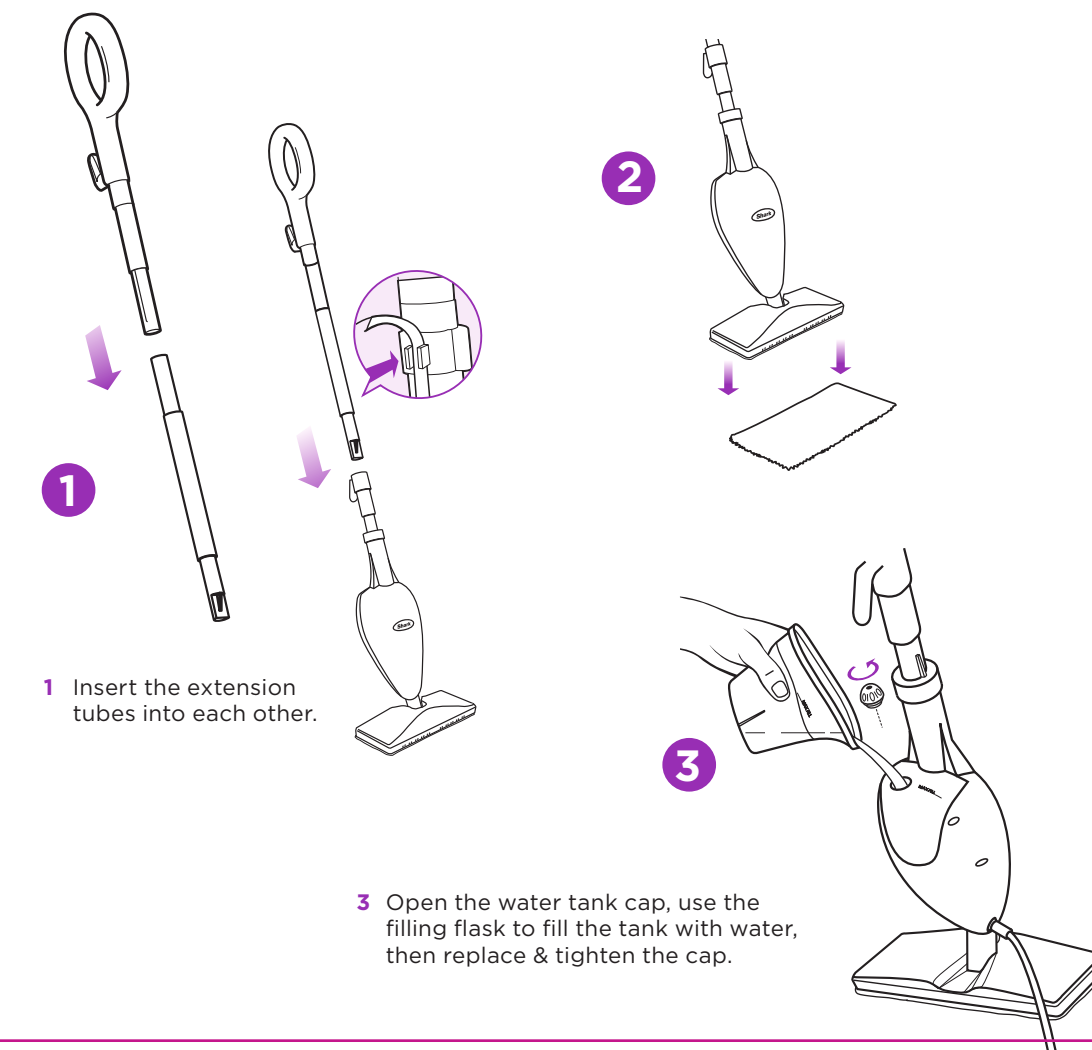

USING YOUR STEAM MOP

NOTE: Prime the unit by pumping the handle to release moisture into the pad before use.

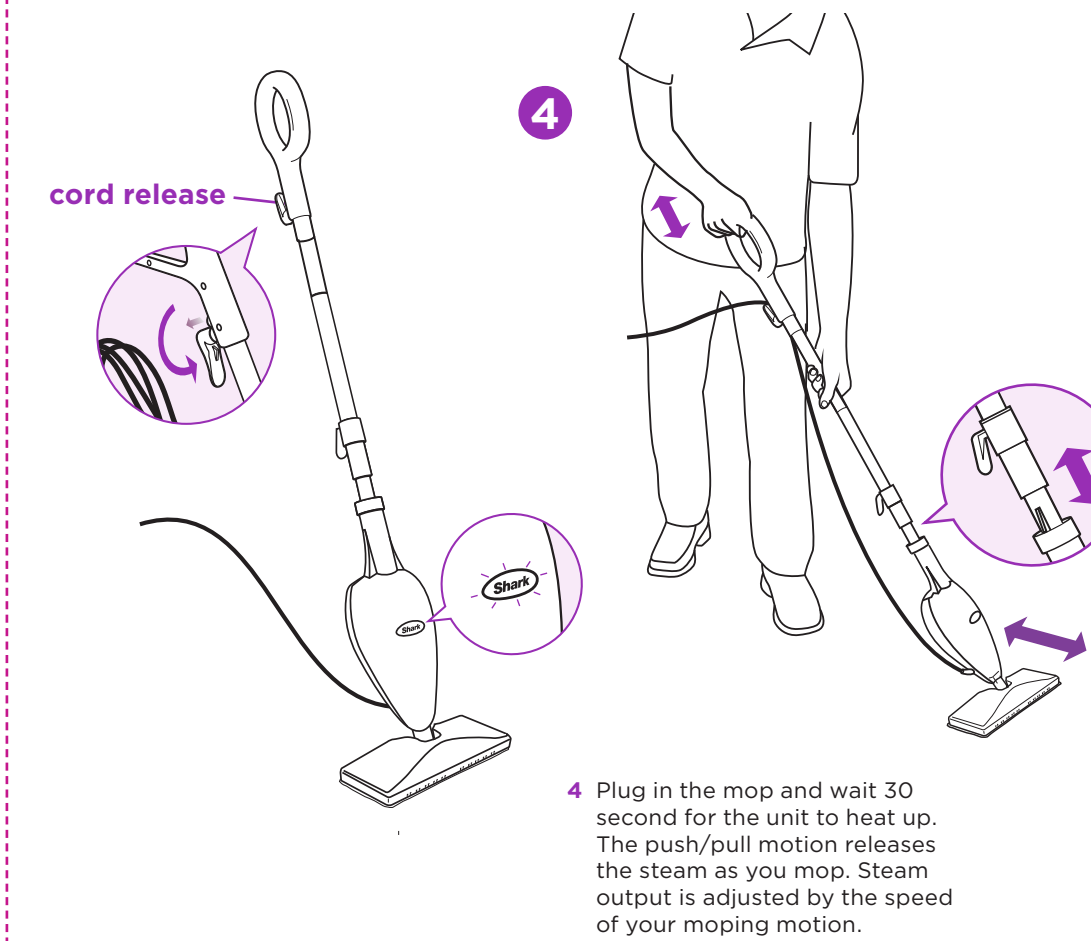

STEPS TO A SHARK® CLEAN FLOOR

1 SWEEP OR VACUUM YOUR FLOOR

We recommend the use of the Shark® Vacuum and/or Sweeper to work in conjunction with the steam mop for a complete cleaning system.

2 SANITIZE WITH A SHARK® STEAM MOP**

Shark® Steam Mops provide 99.9% sanitization* and are great for cleaning up stuck on dirt, grime, and footprints.

For extra tough messes, try our new Shark® Steam Energized™ cleanser. This gentle cleaning solution combines with steam for superior deep cleaning.

3 REGULAR MAINTENANCE IS KEY

Daily spot cleaning is recommended to keep dirt and grime from building up in your home.

The range of convenient, quick clean products from Shark® is guaranteed to help you keep a clean and sanitized home.

** TIP: The initial use of the steam mop may cause streaking or clouding due to the residue from chemicals and polish previously used on your floors. Regular use of the steam mop will diminish this effect. For stubborn cases, you may need to rinse the floor with a mixture of one part vinegar and two parts water. Remember, a clean mop pad is essential for residue removal.

Problem Resolution Checklist

Issue	Resolution
✓ The Shark® Steam Mop will not turn-on.	Ensure the power cord is plugged in correctly to a working 120 volt outlet.
✓ Shark® Steam Mop will not make steam.	Check the water tank. If empty, add water to the steam mop by following the instructions above.
✓ Shark® Steam Mop leaves water on the floor or is hard to push.	Be sure that the cleaning pad is soaked through and properly affixed to the entire mop head. If the pad is over saturated, unplug the unit, wait 2 to 3 minutes for the pad to cool, and then replace with a clean dry mop pad.
✓ Shark® Steam Mop left white spot on the floor.	Check to see if the cleaning pad is soaked through. We recommend that you unplug the unit and replace the cleaning pad. Make sure that the cleaning pad is attached correctly.
✓ Floors are cloudy, streaky or spotty after steaming.	The initial use of the Steam Mop may cause clouding, streaking, or spotting of floors due to the residue from chemicals previously used to treat the floor. Be sure to follow the "Steps to a Shark® Clean Floor".
✓ Unable to Resolve Your Issue?	If you are still having difficulty using the Shark® Steam Mop, call our Customer Care Center at 1-800-798-7398.

Looking for Replacement Parts or Accessories? Check out www.sharkclean.com or give our Customer Care Center a call at 1-800-798-7398.

For **brighter, streak free floors**, try

Shark
Steam
ENERGIZED™
cleanser

- Breaks down tough greasy & stuck on messes
- Non-toxic, biodegradable
- Safe around kids & pets†
- Great fresh scent



Cleanser available at select retailers and at
www.sharkclean.com

or by calling

1-800-798-7398

† When used as directed.

Shark
Steam Mop

GETTING
STARTED →



Loosen, Lift
& Lock-in Dirt

Euro-Pro® Art Specifications

Project: 53101_N3_QSG_131223



Art Produced at 100%
Paper: Quality A (Bright White) 157g/m2
Coating: Matte both sides