

# 13-0041 (HAF-500) 100 CFM AIR CONTROL UNIT

### **DESCRIPTION**

This filter unit is designed to remove dirt, pipe scale and most liquid aerosols. Any of these, especially water, may cause servere damage to the paint finish. This unit is rated at 100 CFM.

# **SPECIFICATIONS**

Air Inlet	1/2" NPT(F)
Air Outlet	1/2" NPT(F)
Air Capacity	100 CFM
Max. Temperature	150° F
Intermittent To	180° F
Max. Inlet Pressure	150 PSI

### **INSTALLATION**

WARNING


Risk of personal injury. Risk of property damage.

Except as otherwise specified by the manufacturer, this product is specifically designed for compressed air service and use with any other fluid (liquid or gas) is a misapplication. For example, use with or injection of certain hazardous gases in the system (such as oxygen or liquid pertroleum gas) could be harmful to the unit or result in a combustible condition that may cause fire or explosion. Manufacturer's warranties are void in the event of misapplication and manufacturer assumes no responsibility for any resulting loss.

## **WARNING**

Risk of injury. Do not place unit in service without metal bowl guard installed. Plastic bowl units are sold only with metal bowl guards. To minimize the danger of flying fragments in the event of plastic bowl failure, guard must not be removed. If the unit is in service without the metal bowl guard installed, manufacturer's warranties are void and the mnanufacturer assumes no responsibility for any resulting loss. If unit has been in service and does not have a metal bowl guard, order one and install before placing back in service.

Figure 1

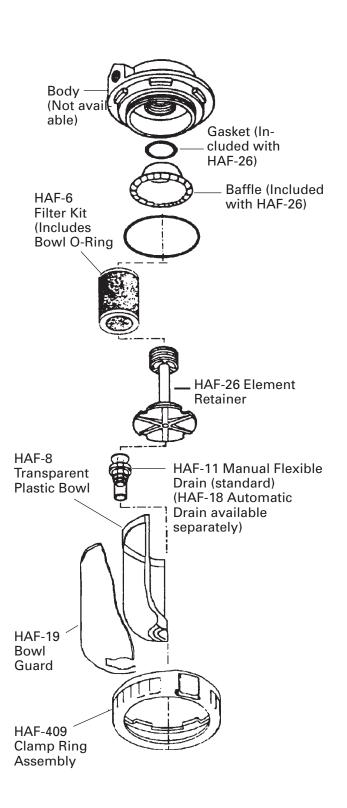

#### PAGE 2 SB-6-140-J


- 1. Be sure to read all warnings and cautions before using this equipment.
- 2. Install as close as possible to point where air is being used.
- 3. Install the unit with the air flowing through the body in the direction indicated by arrow.
- 4. Install the same pipe-size as the pipeline in use. Avoid using fittings, couplings, etc. that restrict airflow.
- 5. Maximum inlet pressure and operating temperature rating is: transparent plastic bowls, 150 psig (10.3 bar) and 150° F (65.6° C) and intermittently to 180° F (82° C).
- Use standard and accepted methods such as industrial type pipe clamps to support vertical and horizontal pipe runs connected to this filter.
- 7. Install unit only in the vertical positon.

# **MAINTENANCE**

- Each time the bowl is cleaned or the filter element replaced:
- 2. Depressurize unit.
- Inspect seals and replace crazed, cracked, damaged or deteriorated seals with original manufacturer's approved seals only.
- Replace the filter element every six (6) months, depending upon use. Filter element can be cleaned periodically by blowing off with a blow qun.
- 5. Drain bowl at least once per work shift.
- 6. Before placing the unit in service, make sure that the bowl and bowl guard are reinstalled and securely locked in place.

#### **ACCESSORIES**

HAF-18 (19-0747) Automatic Drain - Remove Flex Drain from plastic bowl. Install new drain as shown in drawing. Do not assemble (or disassemble) this drain in the filter by holding the float cover. Tighten in place (or remove) using a 7/16" wrench on the thread flats. Secure nut finger tight.

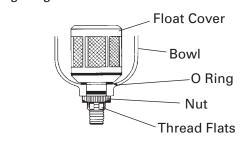

HAF-407 CleanAir™ Mounting Bracket Assembly Kit

### WARRANTY

This product is covered by DeVilbiss' 1 Year Limited Warranty.

# DeVilbiss Sales and Service: www.devilbiss.com

# **DeVilbiss Automotive Refinishing**

DeVilbiss has authorized distributors throughout the world. For equipment, parts and service, check the Yellow Pages under "Automotive Body Shop Equipment and Supplies." For technical assistance, see listing below.

U.S.A./Canada Customer Service Office:

11360 S. Airfield Road, Swanton, OH 43558 Toll-Free Telephone: 1-800-445-3988 (U.S.A. and Canada only) Toll-Free Fax: 1-800-445-6643

