




Portable Air Tank

Operating Instructions & Parts Manual

Model
ATD9895
ATD9890

Capacity
5 gallon
10 gallon

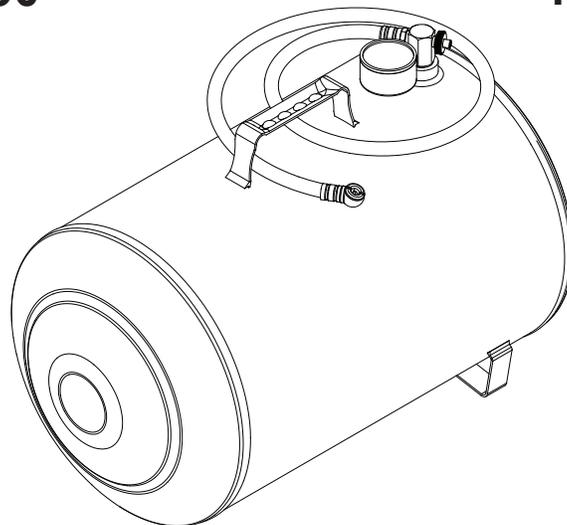

This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

WARNING

- This product contains lead, a chemical known in the State of California to cause cancer, birth defects and other reproductive harm.
- Wash hands after each use.

ATD Tools Inc.

Visit us at www.atdtools.com

Read this manual and follow all the Safety Rules and Operating Instructions before using this product.

SAFETY and GENERAL INFORMATION

Save these instructions. For your safety, read, understand, and follow the information provided with and on this portable air tank before using. The owner and operator of this equipment shall have an understanding of this portable air tank and safe operating procedures before attempting to use. The owner and operator shall be aware that use and repair of this product may require special skills and knowledge. Instructions and safety information shall be conveyed in the operator's native language before use of this product is authorized. If any doubt exists as to the safe and proper use of this portable air tank, remove from service immediately.

Inspect before each use. Do not use if broken, bent, cracked or damaged parts are noted. (Including warning label). Any portable air tank that appears damaged in any way, is missing parts, or operates abnormally shall be removed from service immediately. If the portable air tank has been dropped, impacted suddenly, or dented, immediately discontinue use until product has been checked by an authorized service center (contact distributor or manufacturer for a list of authorized service centers). It is recommended that an annual inspection be done by qualified personnel. Labels and operator's manuals are available from the manufacturer.

PRODUCT DESCRIPTION

ATD Tools Portable Air Tanks are designed to contain air pressure up to 125 psi. **These portable air tanks are designed for one purpose: to supply compressed air for use in inflating tires, sport balls, inflatables.** Check with your inflatable product's owner's manual for proper inflation pressures.



*The air contained within this tank **can not be made breathable!** NEVER rely on this portable air tank as a source of breathable air.*



This portable air tank should only be used for the intended use of portable air. Never use past the discard date on the bottom of the tank. This tank is NOT designed to meet the requirements of ASME or OSHA 1915.172. Check your state and municipal regulatory requirements before using.

PREPARATION BEFORE USE

1. Verify that the product and the application are compatible, if in doubt call Customer Support @ (888)-332-6419.
2. Before using this product, read the owner's manual completely and familiarize yourself thoroughly with the product, its components and recognize the hazards associated with its use.
3. Replace worn or damaged parts and assemblies with Authorized Replacement Parts only. (See Replacement Parts Section).

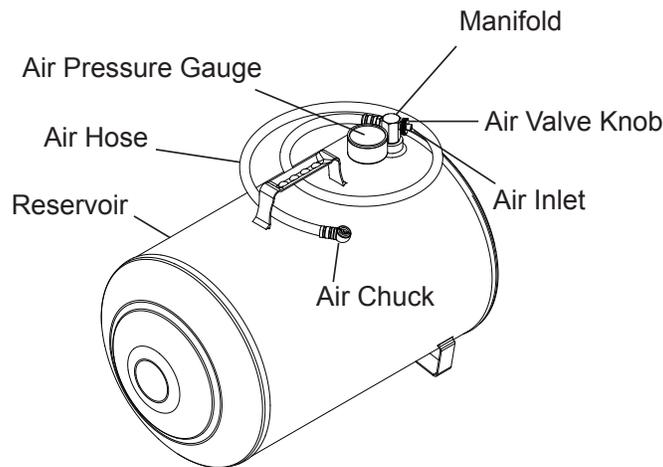


Figure 1 - Typical Air Tank Nomenclature

WARNING

- **Read, understand and follow** all printed materials provided with and on this device **before use**.
- **RISK OF BURSTING** - **Do not** exceed rated pressure of **125 psi**.
- Fill **only from low pressure compressor** systems whose pressure is **no greater than 150 psi**. Fill only with filtered and dried shop air.
- **Do not adjust or tamper** with factory preset **pressure relief valve**.
- **Do not operate** air tank with damaged or missing parts. Replace components with factory authorized parts **only**.
- **Do not attempt to weld or repair** a damaged **tank**.
- **Replace tank** if it is dented, cracked, rusted or otherwise **damaged in any way**.
Always wear safety goggles when handling or using this equipment.
Store indoors, **do not expose to moisture** and/or direct sunlight.
- **RISK OF INJECTION** - Attachments are **NOT** recommended for use with this air tank. Never direct stream of air at person(s). Always wear safety goggles.
- **RISK OF FIRE OR EXPLOSION** **Do not use to store or disperse combustible/flammable liquids, gasses or materials of any kind**.
- **Never use this portable air tank past the discard date stamped into the bottom of the tank.**
Failure to heed these markings may **result in personal injury and/or property damage**

OPERATION

Filling Air Tank: (ref. Fig 1 on page 2)

1. Fill the air tank by connecting an air source to the air tank manifold. Monitor air pressure gauge movement. Do not exceed rated air pressure of 125 psi.
2. Open the air valve by turning the knob counter-clockwise, pressurizing the air hose. Your air tank is now ready for use.

MAINTENANCE

Periodically inspect the air tank. Ensure that all parts move freely. Inspect the air hose for cracking and abrasions. Inspect tank for dents, cracks, and rust.

Do not attempt to weld or repair a damaged tank. Replace damaged components **ONLY!**
(See Replacement Parts section below)

Cleaning

Clean as needed and wipe with a dry cloth.

Storage

When not in use, shut off the air valve by turning the red knob clockwise. Store indoors, do not expose to moisture or heat radiation.

REPLACEMENT PARTS

Not all components of the air tank are replacement items, but are illustrated as a convenient reference of location and position in the assembly sequence. When ordering parts, give model number, serial number and description below. Call or write for current pricing: ATD Tools Inc., Tel:(888) 332-6419 Fax:(816) 448-1999

Part No.	Description	Qty
ATD9892	Gauge	1
ATD9893	Manifold	1
ATD9894	Hose Assy	1

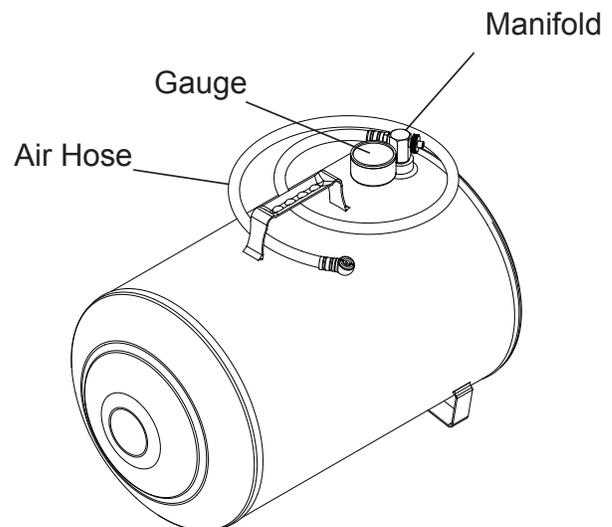


Figure 2 - Air Tank Replacement Parts

Except where such limitations and exclusions are specifically prohibited by applicable law, (1) THE

1 YEAR LIMITED WARRANTY

For a period of one (1) year from the date of purchase, **ATD Tools Inc.** will repair or replace, at its option, without charge, any of its products which fails due to a defect in material or workmanship under normal usage. This above warranty is exclusively exclusive to you. This warranty gives you specific legal rights, and you may also

Performance of any obligation under this warranty may be obtained by returning the warranted product to the original dealer it was purchased from with the original proof of purchase.

CONSUMER'S SOLE AND EXCLUSIVE REMEDY SHALL BE THE REPAIR OR REPLACEMENT OF DEFECTIVE PRODUCTS AS DESCRIBED ABOVE. (2) **ATD Tools Inc.** SHALL NOT BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGE OR LOSS WHATSOEVER. (3) ANY IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO ONE YEAR. OTHERWISE THE REPAIR, REPLACEMENT OR REFUND AS PROVIDED UNDER THIS EXPRESS LIMITED WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER, AND IS PROVIDED IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED. (4) ANY MODIFICATION, ALTERATION, ABUSE, UNAUTHORIZED SERVICE OR ORNAMENTAL DESIGN VOIDS THIS WARRANTY AND IS NOT COVERED BY THIS WARRANTY.

Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the have other rights which vary from state to state.

