




ATD-81012

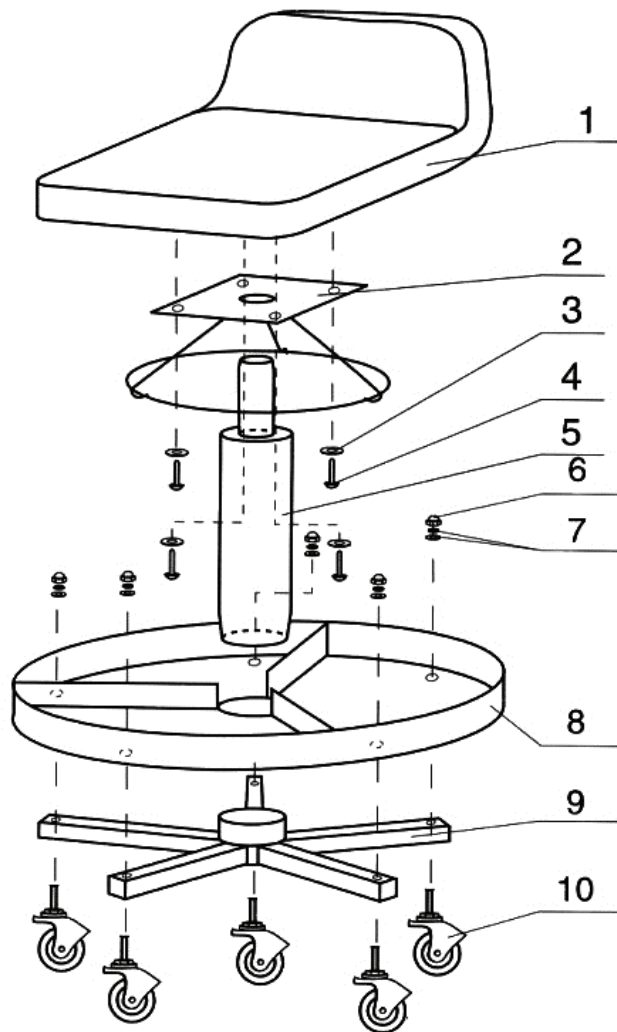

ITEM#	ORDERING PART#	PART DESCRIPTION
1	PRT81012-01	SEAT
2	PRT81012-02	UP&DOWN CONTROL BOARD
3	PRT81012-H	WASHER 6MM
4	PRT81012-H	SCREW 6 x 16MM
5	PRT81012-05	PNEUMATIC SHAFT
6	PRT81012-H	NUT 8MM
7	PRT81012-H	WASHER 8MM
8	PRT81012-08	TOOL TRAY
9	PRT81012-09	STEEL BASE
10	ATD-81001	2.5" REPLACEMENT CASTER (LONG STEM)