


3350 Breckinridge Blvd. Suite 100 Duluth, GA 30096 1-800-426-6256 770-243-2617

EasyClean™ Loading Pump & Filler Attachment Operation and Maintenance Guide

"How Professionals Finish The Job"

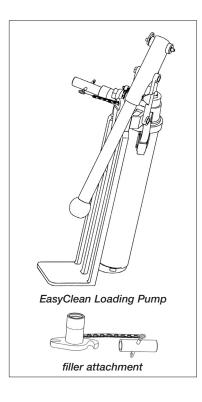

Operation

With its two nozzles, the EasyClean® Pump fills nail spotters, automatic tapers, flat boxes, corner applicators, and MudRunner.™

The filler attachment is secured to the EasyClean® Pump by aligning the slots of the filler over the studs on the EasyClean® Pump housing and tightening the two hex nuts. The gasket should be placed between the EasyClean® Pump and the filler, before tightening nuts, to prevent leakage.

Place the EasyClean® Pump in a standard five gallon pail, making sure the joint compound is well mixed and lump free. A new or fresh EasyClean® Pump should be primed before use by pouring 1/2 cup of water into the outlet. Once the EasyClean® Pump is full of joint compound, no further priming is needed.

Maintenance

The EasyClean® Pump can be disassembled by disengaging the two clasps at the top of the EasyClean® Pump and pulling the barrel away from the main EasyClean® Pump body. The plunger can then be removed by disengaging the quick release pin and sliding the plunger through the EasyClean® Pump housing.

The EasyClean® Pump can now be cleaned by using a water hose or water and a brush to remove the joint compound from the EasyClean® Pump housing and plunger. Then, after the tool is clean, lightly oil with Ames® Bazooka® Oil or any light machine oil. To keep your EasyClean® Pump in top working order, you may need to replace the screen, gasket or o-ring on your EasyClean® Pump. These items should be checked when you clean your EasyClean® Pump.