



## Model FD06R1/Z Parts list

A = Standard Equipment

O = Circuit Diagram

Item#	Part#	Description	Q'ty	Unit
001	126233-0	SPEED CHANGE LEVER ASSEMBLY	1	PC.
	C10 231433-0	COMPRESSION SPRING 4	2	PC.
002	183B50-3	HOUSING SET	1	
	C10 252126-6	HEX. LOCKING NUT M4-7	2	PC.
	D10	INC. 14		
003	851H54-6	FD06 NAME PLATE	1	
004	266429-2	TAPPING SCREW 3X16	9	PC.
005	232239-9	LEAF SPRING	1	PC.
006	456039-5	F/R CHANGE LEVER	1	
007	632F43-6	SWITCH UNIT	1	
	C10 620463-0	LED CIRCUIT	1	
008	644813-5	TERMINAL	1	
011	123504-6	GEAR ASS'Y	1	
	D10	INC. 16-20		
012	629169-7	DC MOTOR	1	
013	911003-8	PAN HEAD SCREW M3X6	2	PC.
014	183B50-3	HOUSING SET	1	
	C10 252126-6	HEX. LOCKING NUT M4-7	2	PC.
	D10	INC. 2		
016	216019-1	STEEL BALL 3	2	PC.
017	324919-2	BIT SLEEVE	1	PC.
018	233005-7	COMPRESSION SPRING 13	1	PC.
019	267143-3	FLAT WASHER 11	1	PC.
020	231965-7	RING SPRING 10	1	PC.
A01	251314-2	+ SCREW M4X12	1	PC.
A02	346909-5	HOOK	1	
A04	456128-6	BATTERY COVER	1	(FD06R1)
A05	***DC10WD	DC10WD BATTERY CHARGER	1	(FD06R1)
A06	BL1021B	BATTERY BL1021B	2	(FD06R1)
A07	821661-1	PLASTIC CARRYING CASE	1	(FD06R1)
	C10 417724-5	LATCH	2	PC. (FD06R1)