

SPX Corporation 655 Eisenhower Drive Owatonna, MN 55060-0995 USA

Phone: (507) 455-7000 Tech. Serv.: (800) 533-6127 Fax: (800) 955-8329 Order Entry: (800) 533-6127 Fax: (800) 283-8665

International Sales: (507) 455-7223

Fax: (507) 455-7063

Assembly Instructions for:

2018A

# **Underhoist Tripod Stand**

Max. Capacity: 2 Tons

The underhoist tripod stand is designed to help stabilize a vehicle supported by an automotive lift.

	Parts	s List
Item No.	Qty.	Description
1	4	Bolt
2	1	Saddle
3	1	Saddle Base
3 4	1	Bolt
5	1	Handle
6	1	Bearing
7	1	Outer Tube
8	1	Screw Rod
9	6	Bolt
10	1	Bushing Base
11	1	Pin
12	1	Pin
13	1	Chain
14	4	Washer
15	6	Washer
16	6	Nut
17	1	Fixing Plate
18	3	Fixing Bracket
19	12	Washer
20	12	Bolt
21	3	Nut
22	3	Washer
23	3	Leg
24	3	Bolt
25	3	Link A
26	3	Link B

Sheet No. 1 of 1

Issue Date: January 2, 2007 Rev. C

### Replacement Kit

### Hardware Kit No. 529293 includes:

Item No.	Qty.	Description	Item No.	Qty.	Description
1	4	Bolt	15	6	Washer
2	1	Saddle	16	6	Nut
4	1	Bolt	19	12	Washer
9	6	Bolt	20	12	Bolt
11	1	Pin	21	3	Nut
12	1	Pin	22	3	Washer
13	1	Chain	24	3	Bolt
14	4	Washer			

## **Safety Precautions**




MARNING: To prevent personal injury and/or property damage,



- Study, understand, and follow all instructions before operating this device.
- If the operator cannot read these instructions, operating instructions and safety precautions must be read and discussed in the operator's native language.
- Wear eye protection that meets ANSI Z87.1 and OSHA standards.
- Do not exceed the rated capacity of 4,000 lbs.
- Use only on a hard, level surface.
- Do not use the stand to support a vehicle.
- Center the load on the saddle.
- Use stands in pairs to stabilize the vehicle before starting repairs.
- Do not attempt to remove the detent pin with a load on the stand.

# **Assembly Instructions**

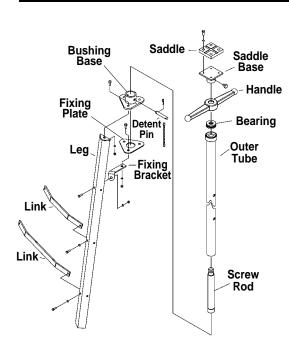

### **Tube Assembly**

- 1. Use bolts to attach saddle to saddle base.
- 2. Slide screw rod into outer tube. Install bearing on outer tube.
- 3. Install handle and saddle base onto screw rod and secure with a bolt.

### **Stand Assembly**

- 1. Loosely attach links to legs using bolts, washers, and nuts provided.
- 2. Loosely attach fixing brackets to legs using bolts, washers, and nuts provided.
- 3. Loosely attach fixing plate to fixing brackets using bolts, washers, and nuts provided.
- 4. Install bushing base to fixing plate.
- 5. Slide outer tube assembly through bushing base and fixing plate. Use detent pin and chain assembly to lock tube in any position.
- 6. Securely tighten bolts and nuts.

### Raise the Load

MARNING! To prevent personal injury and/or property damage, do not attempt to remove the detent pin with a load on the stand.

Major adjustments in the height of the stand must be made **BEFORE** putting a load on the stand. For a major adjustment, remove the detent pin and raise the outer tube to desired height. Replace detent pin.

Once a load is on the stand, minor adjustments can be made by turning the adjusting handle clockwise to a desired height.

#### Lower the Load

Follow the instructions for raising the load, except turn the adjusting handle counterclockwise.