


PARTS BREAKDOWN

Call 1.800.221.9705 for questions concerning performance of the product or other inquiries.

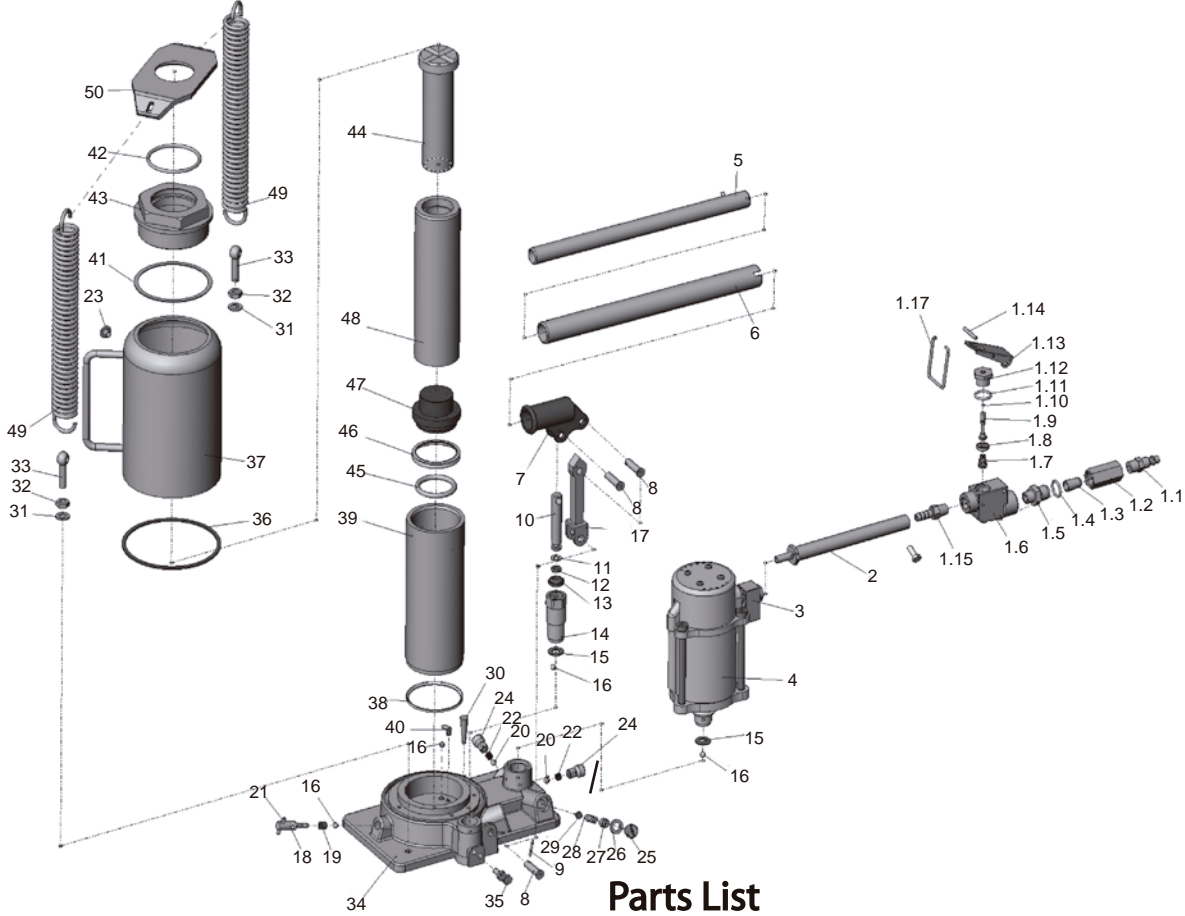

Parts List

Index No.	Part No.	Description	Qty	Index No.	Part No.	Description	Qty	Index No.	Part No.	Description	Qty
1	5302-01	Air Valve Assembly	1	7	5302-07	Pump Handle Socket	1	29	5302-29	Overload Tapering Valve	1
1.1	5302-1.1	Hose Connector	1	8	5302-08	Pump Plunger Pin	3	30	5302-30	Filter	1
1.2	5302-1.2	Connecting Nut	1	9	5302-09	Cotter Pin	3	31	5302-31	Spring Washer 8	2
1.3	5302-1.3	Air Filter	1	10	5302-10	Pump Plunger	1	32	5302-32	Nut 8	2
1.4	5302-1.4	O-Ring 18 x 24	1	11	5302-11	Pump Plunger Retainer	1	33	5302-33	Bolt M8 x 35	2
1.5	5302-1.5	Connector	1	12	5302-12	O-Ring	1	34	5302-34	Base	1
1.6	5302-1.6	Valve Body	1	13	5302-13	Dust-Resistant Ring	1	35	5302-35	Plug Screw	4
1.7	5302-1.7	Spring	1	14	5302-14	Pump Reservoir	1	36	5302-36	Reservoir Bottom Seal	1
1.8	5302-1.8	Packing	1	15	5302-15	Copper Washer	1	37	5302-37	Reservoir	1
1.9	5302-1.9	Throttle	1	16	5302-16	Steel Ball 6	6	38	5302-38	Cylinder Packing	1
1.10	5302-1.10	O-Ring 3 x 1.6	1	17	5302-17	Plunger Connecting Rod	1	39	5302-39	Cylinder	1
1.11	5302-1.11	O-Ring 18 x 2.4	1	18	5302-18	Release Valve screw	1	40	5302-40	Steel Ball Retainer	2
1.12	5302-1.12	Nut	1	19	5302-19	Release Valve Seal	1	41	5302-41	Reservoir Top Seal	1
1.13	5302-1.13	Lever	1	20	5302-20	Steel Ball 6.35	2	42	5302-42	O-Ring	1
1.14	5302-1.14	Lever Rin	1	21	5302-21	Pin	1	43	5302-43	Top Nut	1
1.15	5302-1.15	Hose Connector	1	22	5302-22	Valve Spring	2	44	5302-44	Extension Screw	1
1.17	5302-1.17	Lock Lever	1	23	5302-23	Filler Plug	1	45	5302-45	O-Ring	1
2	5302-02	Air Hose	1	24	5302-24	Screw	2	46	5302-46	O-Ring Returner	1
3	5302-03	Connector	1	25	5302-25	Plug Screw	1	47	5302-47	Piston	1
4	5302-04	Air Pump	1	26	5302-26	Plug Washer	1	48	5302-48	Piston Rod	1
5	5302-05	Upper Handle	1	27	5302-27	Overload Valve Screw	1	49	5302-49	Spring	2
6	5302-06	Lower Handle	1	28	5302-28	Safety Valve Spring	1	50	5302-50	Spring Plate	1

Call 1.800.221.9705 for questions concerning performance of the product or other inquiries.

Air Pump Assembly

Parts List

Index No.	Part No.	Description	Qty
1	5302-04-1	Connector	1
2	5302-04-2	Hex-Socket Screw M8 x 100	3
3	5302-04-3	Top Cylinder Head	1
4	5302-04-4	O-Ring 63 x 3.55	1
5	5302-04-5	Air Pump Cylinder	1
6	5302-04-6	Spring Washer 8	3
7	5302-04-7	Seal	1
8	5302-04-8	O-Ring 60 x 35	1
9	5302-04-9	Square Ring	2
10	5302-04-10	Piston	1
11	5302-04-11	Nut M5	1
12	5302-04-12	Plunger Spring Seat	1
13	5302-04-13	Plunger	1
14	5302-04-14	Spring	1
15	5302-04-15	Nut	1
16	5302-04-16	Packing Guide	1
17	5302-04-17	NL Reainer	1
18	5302-04-18	Y Seal	1
19	5302-04-19	Bottom Cylinder Head	1
20	5302-04-20	Adjusting Nut	1
21	5302-04-21	Plunger Cylinder	1
22	5302-04-22	Cover	1
23	5302-04-23	Thread Seal	1
24	5302-04-24	O-Ring 5.6 x 1.8	1
25	5302-04-25	Shuttle Valve	1
26	5302-04-26	O-Ring 23.6 x 3.55	1
27	5302-04-27	O-Ring 31.5 x 1.8	1
28	5302-04-28	Muffler Filter	1
29	5302-04-29	Muffler Cover	1
30	5302-04-30	Bolt M4x8	4
31	5302-04-31	Washer	1

