

Operation and Use Instructions for the Dolly Max



Follow the enclosed assembly instructions

Dolly Max comes standard with the base and 4 posts. Other options you may see in your package are: Additional posts, additional front casters, rear caster bracket with locking casters, or the wheelbarrow attachment.

Configuration the post positions


The dolly max offers several post positions so you can vary the configuration to accommodate the load.

There are 10 vertical post positions on top. We suggest centering the load whenever possible.

The 6 horizontal post positions will provide more surface area to fit your load. Four horizontal post positions are in the front/back and two are in the side. Be aware of the doorway opening when using the side post positions. You cannot use both front and side horizontal positions at the same time.

Maximum weight limits:

Base = 700 lbs
with casters = 1000 lbs
with caster bracket = Add 300 lbs
Side load of posts = 150 lbs at mid point
Side load of posts = 75 lbs at top point

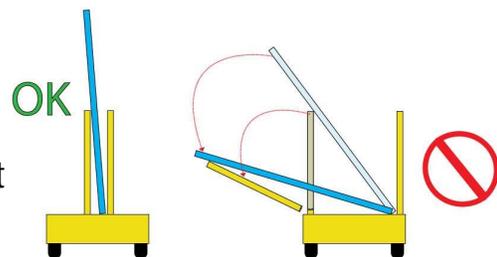

Load situations

When loading the dolly you will want to center the load so it won't tip over. The majority of the weight should be directly on the base. When loading sheets of material you will want to start your load with the post positioned so the weight is always centered on the base and move them out as necessary to prevent sideways tipping.

The caster bracket will provide larger wheel base to prevent the backside from tipping over. This bracket will extend the base from 21" to 37". This is helpful when moving large heavy loads on a prepared surface such as in a warehouse while moving pallets.

Transporting loads

The large tires allows this cart to maneuver over various surfaces. You should push with large wheels forward to allow the dolly to travel over obstacles easily.

When pulling the dolly you should pull with casters forward. This will allow for easy steering and turning of the dolly.

Push on the post not on the load when possible. This helps ensure that the load is not pushed off the dolly.

Use the provided strap tie downs slots to secure the load with a tie down strap.

When the dolly is stationary, lock the casters so the dolly will not roll away from you. If on a hill, position the casters on the downhill side when locking them for maximum effectiveness.

Wheelbarrow Attachments

Wheelbarrow brackets should be installed on the side panels of the cart. The black one should be located at the top and the yellow one at the bottom.

Insert brackets from the bottom inside of the cart. The tabs of the bracket should be inside the cart body.

Insert post with the striped end towards the base. Insert locking pin when holes line up.