

ATD Spare Parts List

Model No. Atd-5825

<u>Item</u>	<u>Part No.</u>	<u>Description</u>	<u>Quantity</u>
1	H23-6-2102-105	Dust Seal	1
2	H23-6-2101-103	Plunger	1
3	644-1-0040-103	Bolt	1
4	H23-3-2100-103	Return Spring	1
5	H23-3-9901-102	Repair Kits (O-ring, Back-up ring, and special washer)	1
6	614-1-0040-109	Bolt	1
7	H23-6-1601-108	Base (N/A)	1
8	H20-6-6008-102	Bushing	1
9	434-6-3204-308	Nut	1
10	434-6-3312-200	Female Coupler (1/4" NPT Black Zinc)	1
11	434-3-3201-203	Dust Cap	1
12	H23-3-1001-106	Magnetic Adapter I	1
13	H23-3-1002-108	Magnetic Adapter II	1
14	H23-3-1003-100	Magnetic Adapter III	1
15	H23-3-1004-102	Magnetic Adapter IV	1
16	H23-6-7101-108	Blow Molded Case	1

N/A - Part is not available

