


371, Reversible Screwdriver - Exploded View

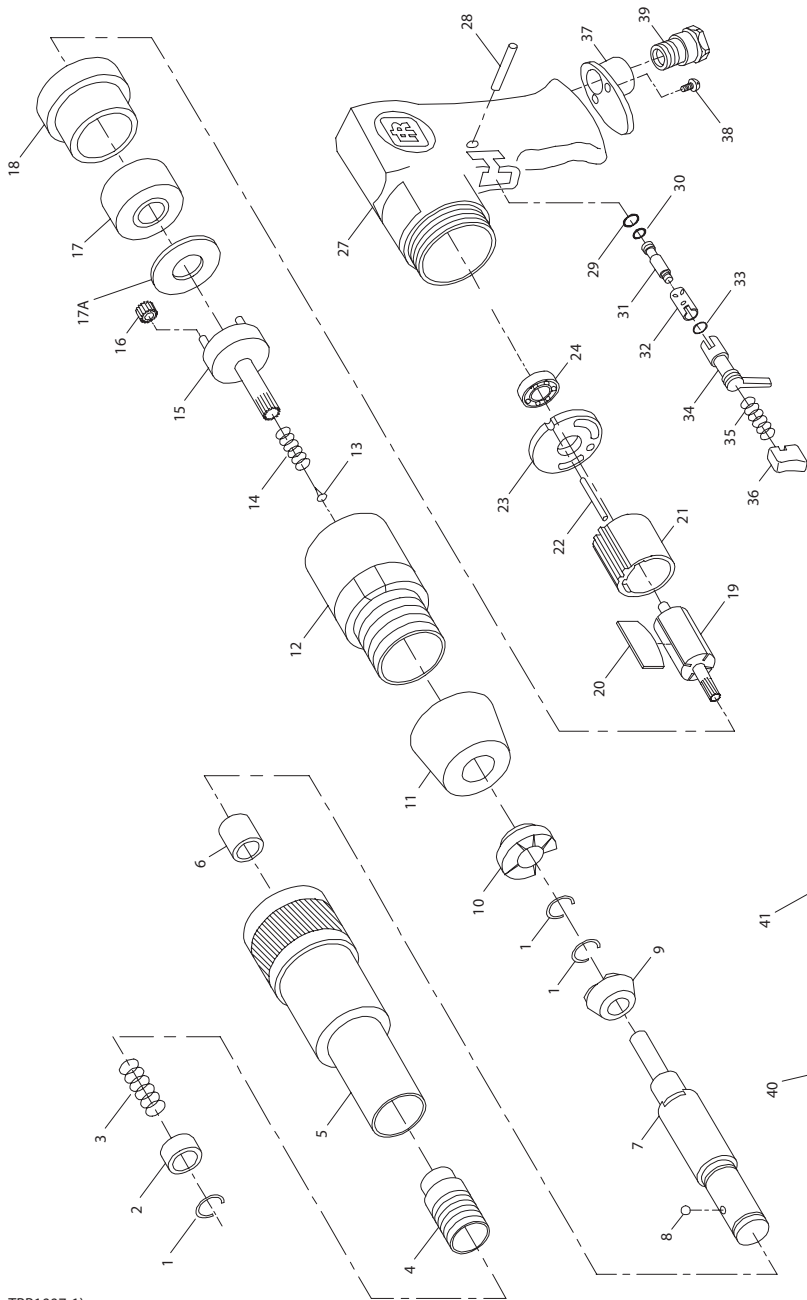

(Dwg. TPB1007-1)



371, Reversible Screwdriver - Parts List

Item	Part Description	Part Number	Item	Part Description	Part Number
1	Retaining Ring (3)	LA412-1	20	Vane (set of 5)	LA412-42-5
2	Washer	LA412-2	21	Cylinder	LA412-3
3	Spring	LA412-4	22	Dowel Pin	LA412-98
4	Bit Retaining Sleeve	LA412-931	23	Rear End Plate	LA412-12
5	Clutch Housing	LA412-580	24	Bearing	LA412-61
6	Clutch Bushing	LA412-19	27	Motor Housing	LA412-40
7	Bit Holder	LA412-20	28	Pin	LA412-64
8	Bit Retaining Ball	LA412-13	29	O-Ring	LA412-65
9	Front Clutch Jaw	LA412-589	30	O-Ring	LA412-66
10	Rear Clutch Jaw	LA412-588	31	Throttle Valve	LA412-302
11	Bearing	LA412-22	32	Reverse Valve Bushing	LA412-330
12	Gear Case	LA412-37	33	O-Ring	LA412-67
13	Clutch Guide	LA412-24	34	Reverse Valve	LA412-329
14	Clutch Spring	LA412-583	35	Valve Spring	LA412-51
15	Gear Frame	LA412-191	36	Trigger	LA412-93
16	Planet Gear (3)	LA412-10	37	Exhaust Adapter	LA412-123
17A	Washer	LA412-97A	38	Screws (2)	LA412-70
17	Bearing	LA412-97	39	Air Inlet	LA412-565
18	Front End Plate	LA412-11	40	Nameplate	371-301
19	Rotor	LA412-53	41	Warning Label	WARNING-7-99

Parts and Maintenance

When the life of the tool has expired, it is recommended that the tool be disassembled, degreased and parts be separated by material so that they can be recycled.

Tool repair and maintenance should only be carried out by an authorized Service Center.

Refer all communications to the nearest **Ingersoll Rand** Office or Distributor.

Related Documentation

For additional information refer to:

Product Safety Information Manual 04585006,

Product Information Manual 80160179.

Manuals can be downloaded from www.ingersollrandproducts.com.