

technical service bulletin

Bulletin # 80050-121410

Changing the bulb (PRT80050-31 or Philips F30T8) in the ATD-80050 is done from the side of the handle that does not have the switch and cord on it. While there is a label on the light, labels can sometimes come off. The following procedure is outlined in the instruction manual as well.

- Unplug the light from any power source before attempting ANY repair to it.
- Replace with 30W T8 style bulb only (PRT80050-31, Phillips 392167 or equivalent).
- On the handle end WITHOUT the on/off switch, unscrew the six screws (item# 24) from the handle.
- Carefully pull the two handle pieces apart, exposing the wiring and bulb socket.
- Ease the bulb socket (item# 9) carefully out of the lens tube taking care not to pull the wiring out of it.
- Once the bulb socket is removed, simply pull the bulb out of the lens tube.
- Assembly is the reverse of disassembly. Take care not to pinch the wires between the handle halves when reassembling.



If bulb is broken please note additional steps below before you reassemble the handle:

- After removing the part of the bulb that can be pulled out from the end that has been opened in the above procedure hold the light fixture vertically and gently shake out any shards and dust from the broken bulb.
- Put the light back on the table and slide the top half of the clear cover away from the end with the on/off switch. To do this you must hold the bottom half of the cover with your other hand.
- Once you have slid the top half away from the handle enough to grab the end of the bulb that is still in the light pull that end out of its socket and then slide it out of the fixture.
- Slide the top half back in place.
- Once again turn the light vertical to shake out any shards.
- Put the new bulb in and reassemble the handle.

Thank you,

A handwritten signature in black ink, appearing to read "P. M. Jones", written in a cursive style.